

# ErP Product Information

Product name: 5G CPE  
Model: H155-382  
Manufacture's Name ZOWEE TECHNOLOGY (HEYUAN) CO., LTD.  
Manufacture's Address Runye Precision Manufacturing Industrial Park, among the north of Xiangjing Road, the west of Xinpi Road and the south of Yangzi Road, located in the High-tech Zone, Heyuan City, Guangdong Province

We, ZOWEE TECHNOLOGY (HEYUAN) CO., LTD. declare under our sole responsibility that the above referenced product complies with the Directive 2009/125/EC, and its implementation regulation (EU) 2023/826. The external power supply complies with the implementation regulation (EU) 2019/1782.

Pursuant to the Annex III point 3 of (EU) 2023/826, the free access websites of manufacturers, importers or authorised representatives shall include the following information for all equipment.

(1) for each off mode, standby mode (or another condition which does not exceed the applicable power consumption requirements for off mode or standby mode) and networked standby into which the equipment is switched by the power management function or similar function:

- the power consumption expressed in watts rounded to the first decimal place;
- the period after which the equipment reaches automatically standby mode, off mode or networked standby in minutes and rounded to the nearest minute;

Mode	Type of Network Port	Power Consumption (W)	Time(min)
Standby Mode	N/A	N/A	N/A
Off Mode	N/A	0.5	20
Another Condition	N/A	N/A	N/A
Networked standby	WAN	8.0	20
	LAN	8.0	20
	TEL	8.0	20
	Wi-Fi 2.4G	8.0	20
	Wi-Fi 5G	8.0	20
	5G NR	8.0	20

	LTE	8.0	20
--	-----	-----	----

(2) the power consumption of the equipment in networked standby if all wired network ports are connected and all wireless network ports are activated: 10.5 W.

(3) For equipment that needs an external power supply, but it is placed on the market without one, the manufacturer, importer or authorised representative shall provide information on the technical characteristics of the product model of the external power supply to be used with that equipment.

<b>If this equipment placed on the market with an external power supply</b>	<b>Information on the technical characteristics of the product model of the external power supply to be used with that equipment</b>
Yes	N/A

(4) guidance on how to activate and deactivate wireless network ports.

Type of Wireless Network Port	Guidance
Wi-Fi 2.4G	<ol style="list-style-type: none"> <li>1. Access the device's web-based management page (see the device nameplate for the address)</li> <li>2. Choose Wi-Fi Settings &gt; Wi-Fi Basic Settings, find the Wi-Fi switch, and turn it on or off as needed to enable or disable the Wi-Fi 2.4G network.</li> </ol>
Wi-Fi 5G	<ol style="list-style-type: none"> <li>1. Access the device's web-based management page (see the device nameplate for the address)</li> <li>2. Choose Wi-Fi Settings &gt; Wi-Fi Basic Settings, find the Wi-Fi switch, and turn it on or off as needed to enable or disable the Wi-Fi 5G network.</li> </ol>
LTE	Powering on the device without a SIM card inserted will disable the cellular network, while powering on the device with a SIM card inserted will enable both the cellular and Wi-Fi networks, and then disable the Wi-Fi network.
5G NR	Powering on the device without a SIM card inserted will disable the cellular network, while powering on the device with a SIM card inserted will enable both the cellular and Wi-Fi networks, and then disable the Wi-Fi network.